






TECHNICAL DATA SHEET

FLEX HEAD


FLEX HEAD + BAR ANCHOR TITAN		TITAN 30/11	TITAN 40/16	TITAN 40/16	TITAN 52/26
Breaking load bar anchor	[kN]	326	673	673	899
Yield load bar anchor	[kN]	260	530	530	730
Ø Rope	[mm]	14.5	18.5	22.5	22.5
Breaking load spiral rope loop	[kN]	350	525	765	765
Article number		144040	144041	144063	144075
Version					

FLEX HEAD + BAR ANCHOR DYWI DRILL (IBO)		DRILL R32-280 (IBO R32N)	DRILL R32-360 (IBO R32S)	DRILL R38-500 (IBO R38N)	DRILL R51-800 (IBO R51N)
Breaking load bar anchor	[kN]	280	360	500	800
Yield load bar anchor	[kN]	220	280	400	640
Ø Rope	[mm]	14.5	18.5	22.5	22.5
Breaking load spiral rope loop	[kN]	350	525	765	765
Article number		144044	144045	144063	144075
Version					

FLEX HEAD + BAR ANCHOR GEWI		GEWI 25	GEWI 28	GEWI 32	GEWI 40
Breaking load bar anchor	[kN]	285	357	466	729
Yield load bar anchor	[kN]	245	308	402	628
Ø Rope	[mm]	14.5	14.5	18.5	22.5
Breaking load spiral rope loop	[kN]	350	350	525	765
Article number		144047	144042	144043	144065
Version					

FLEX HEAD

FLEX Head standard design in rock

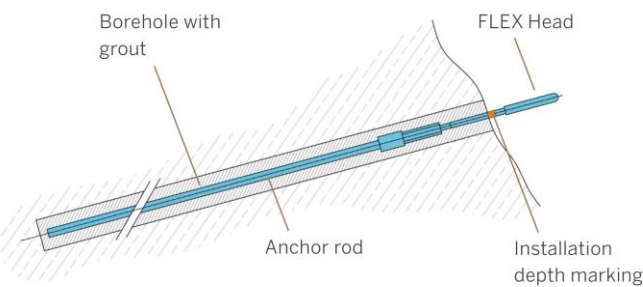

FLEX Head standard design in soil

